

FIG. 1

+

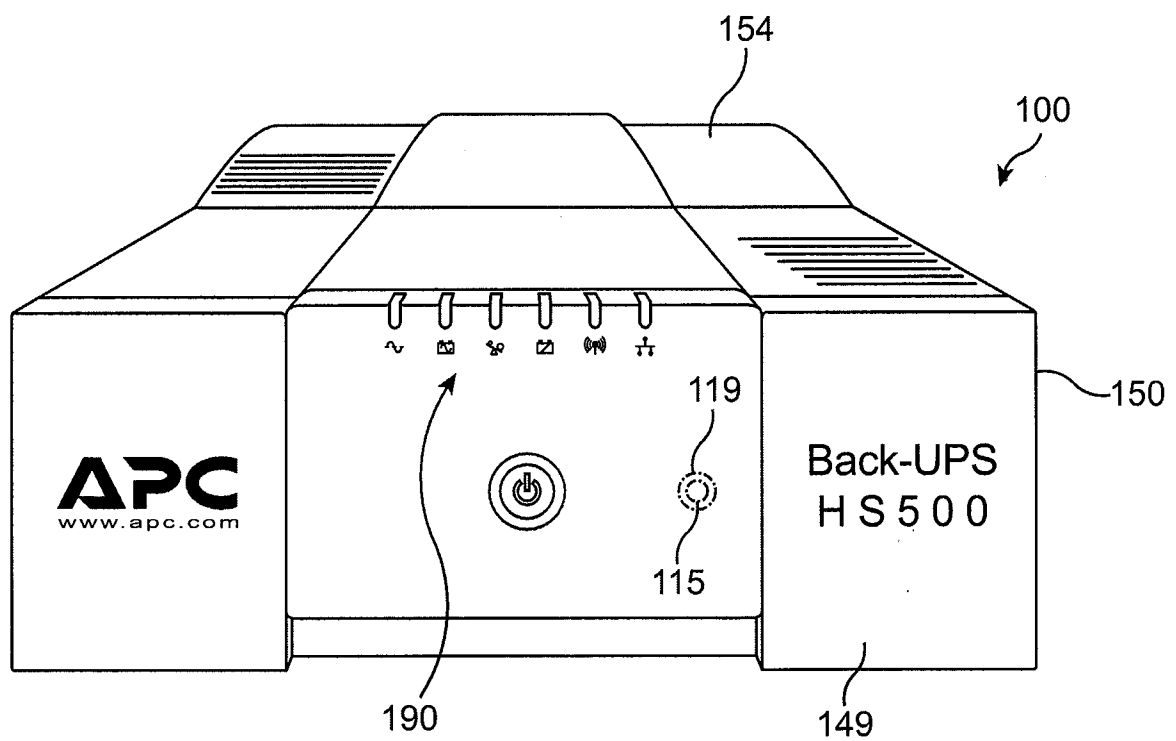


FIG. 2

+

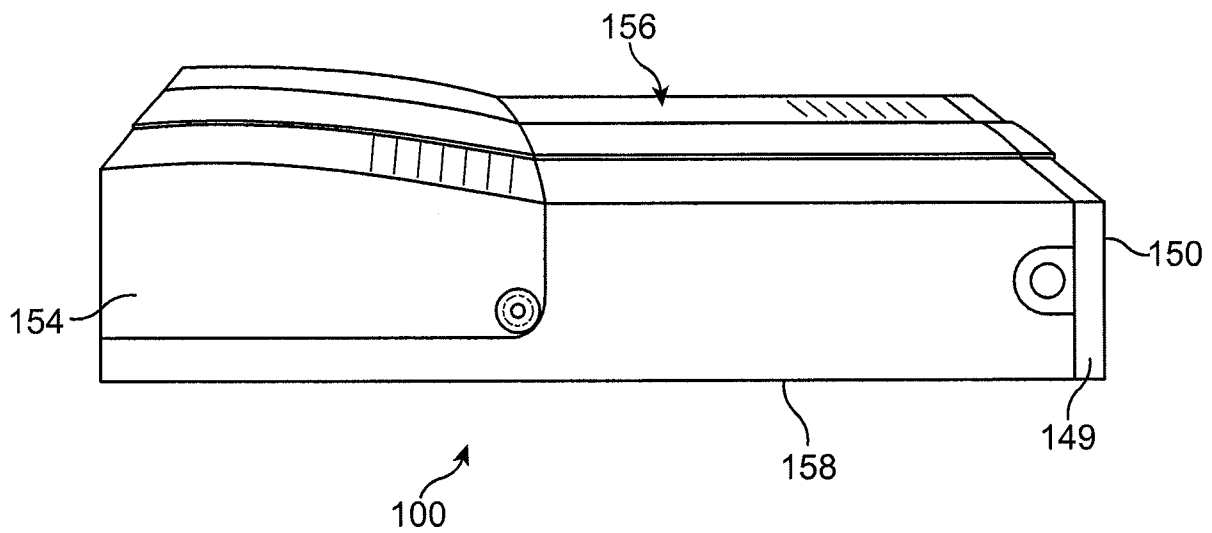


FIG. 3

+

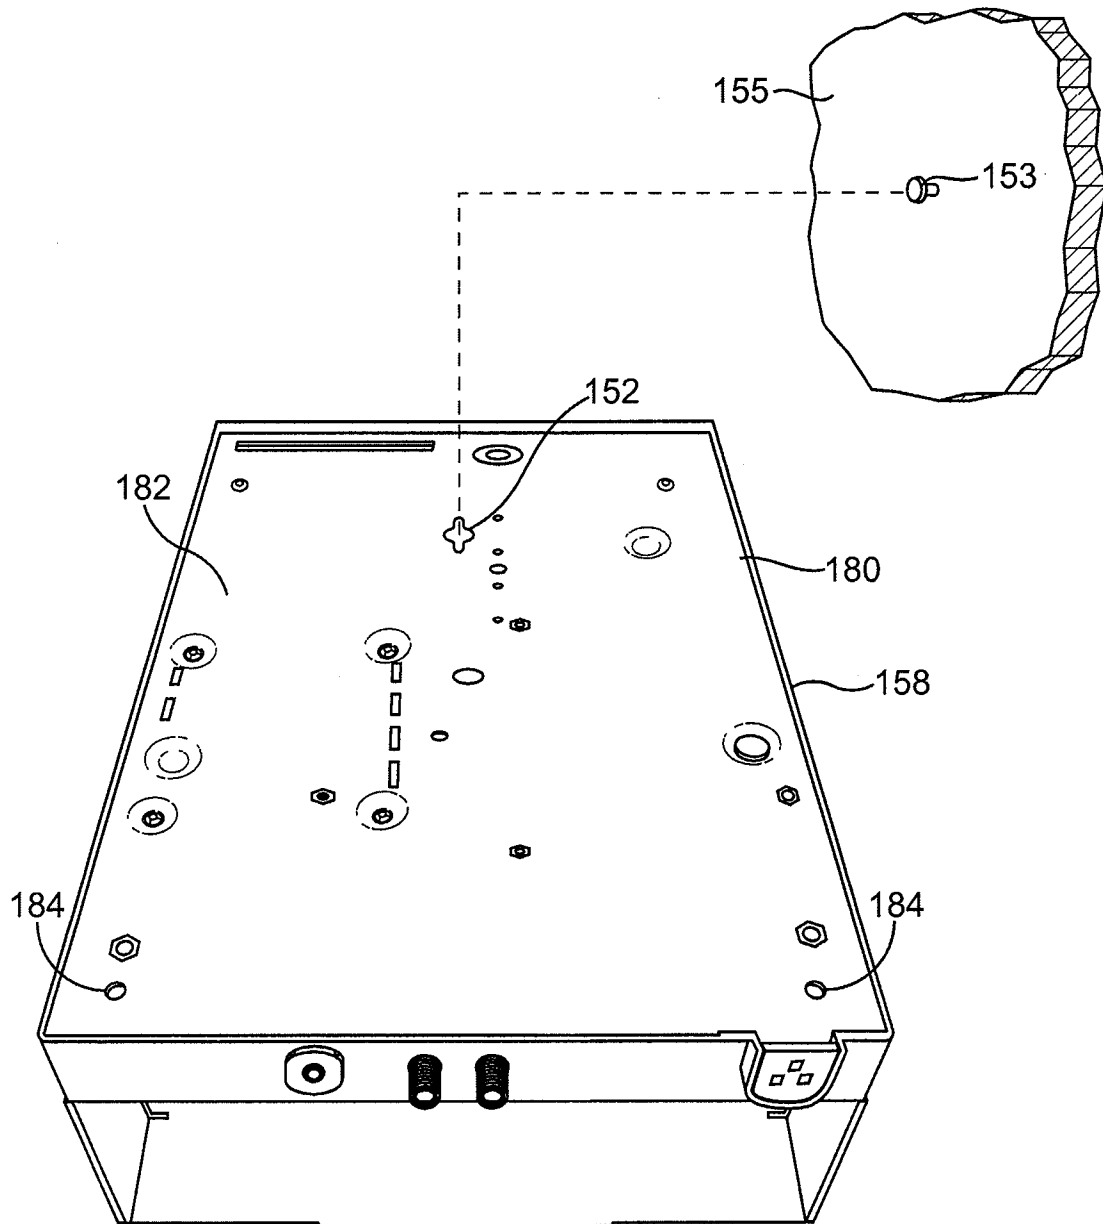


FIG. 4

+

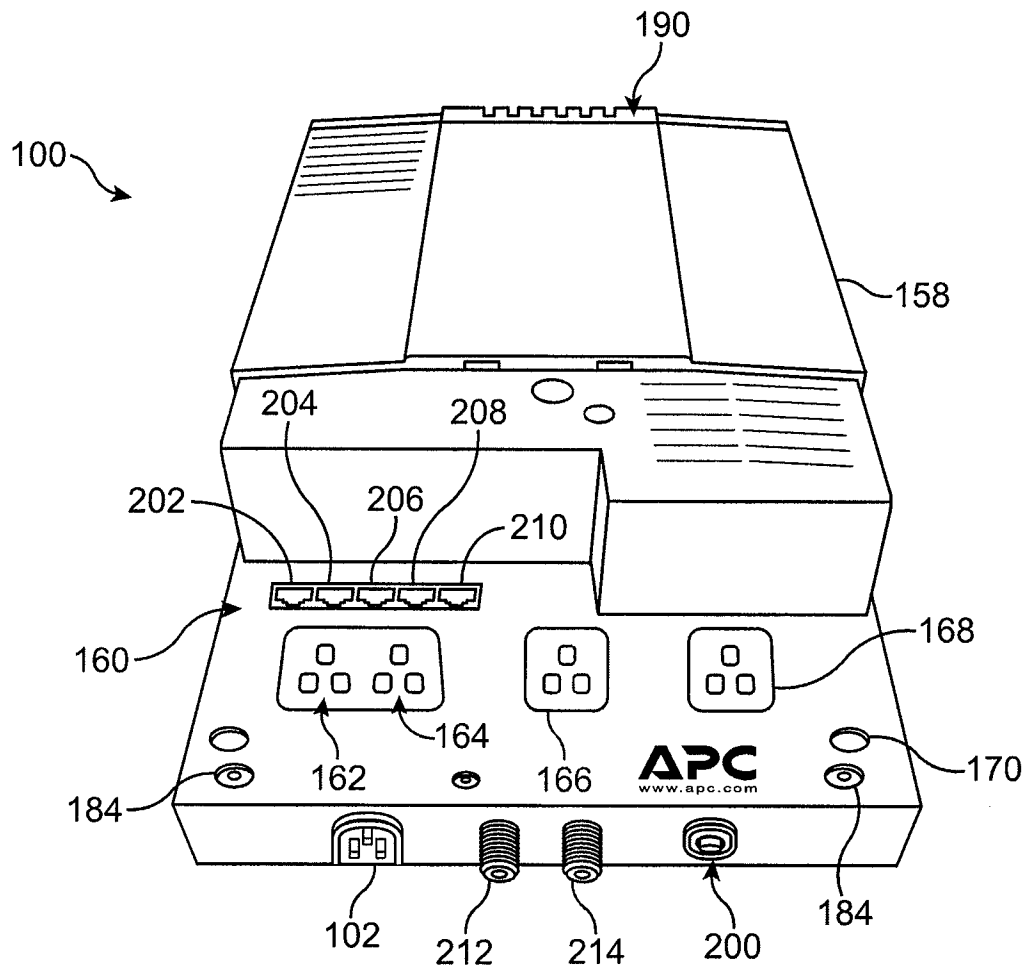


FIG. 5

+

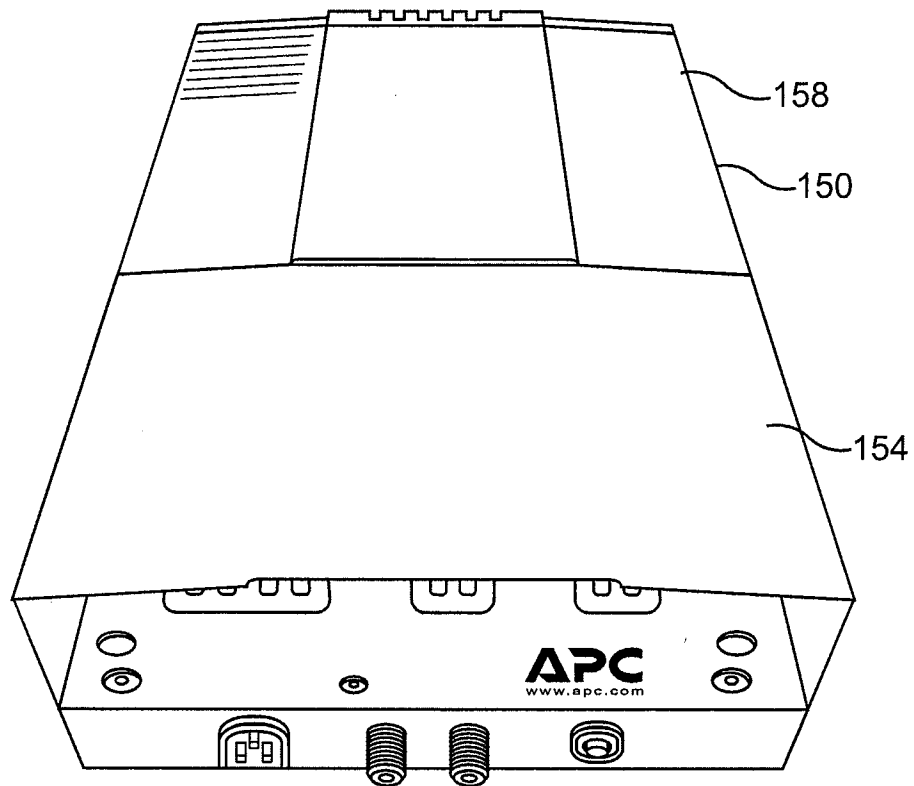


FIG. 6

Replacement Sheet

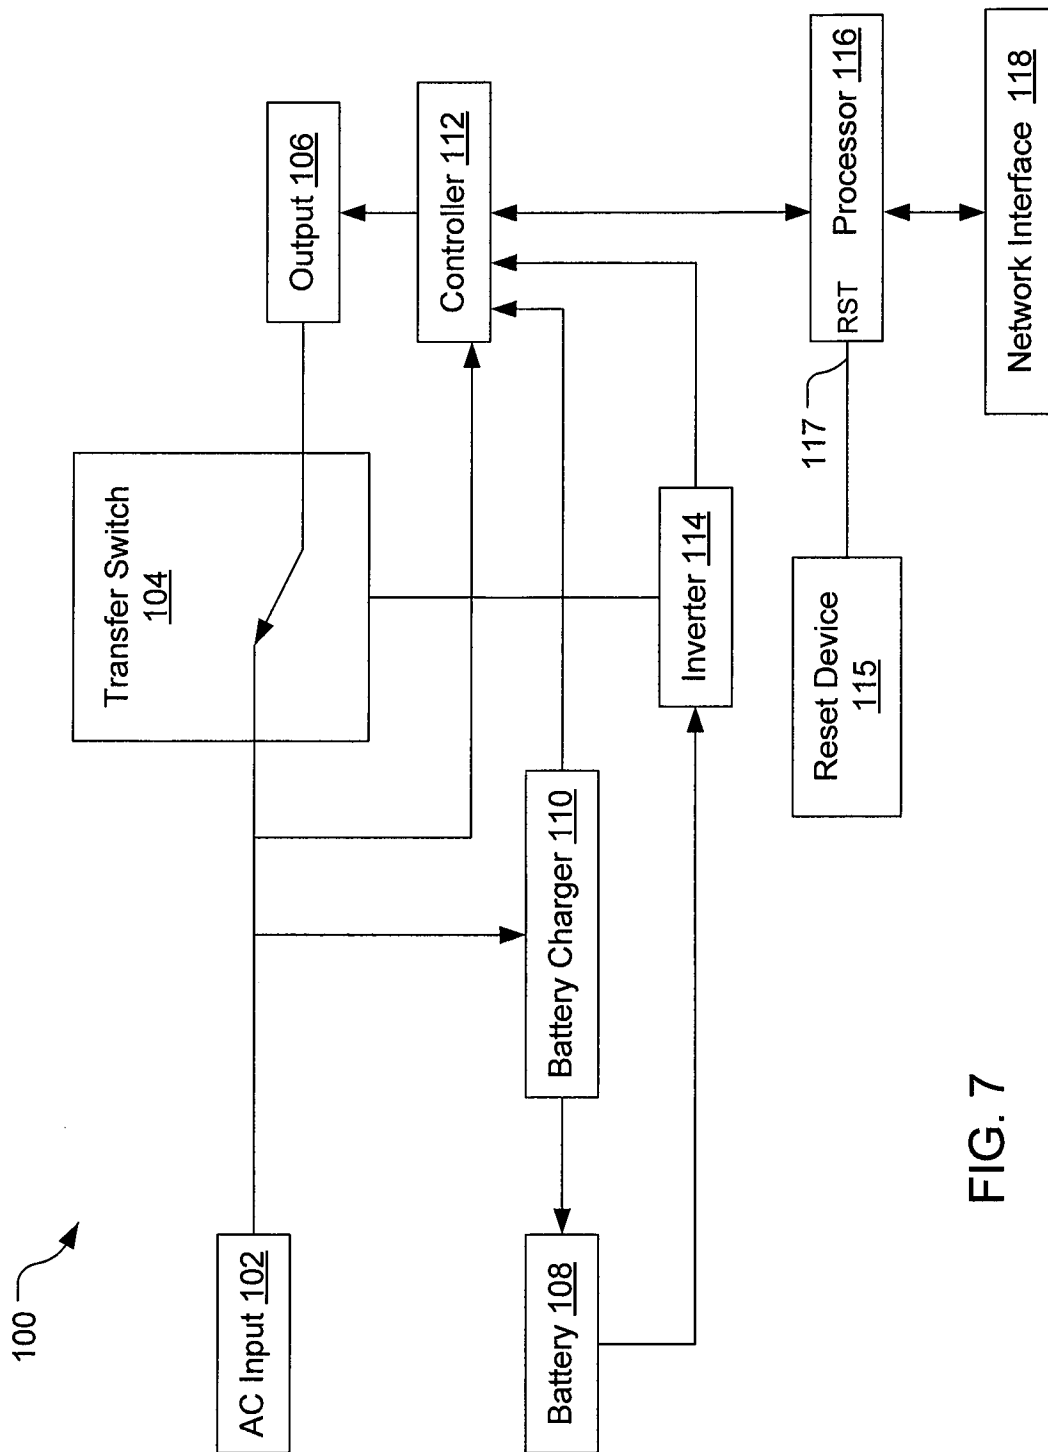


FIG. 7

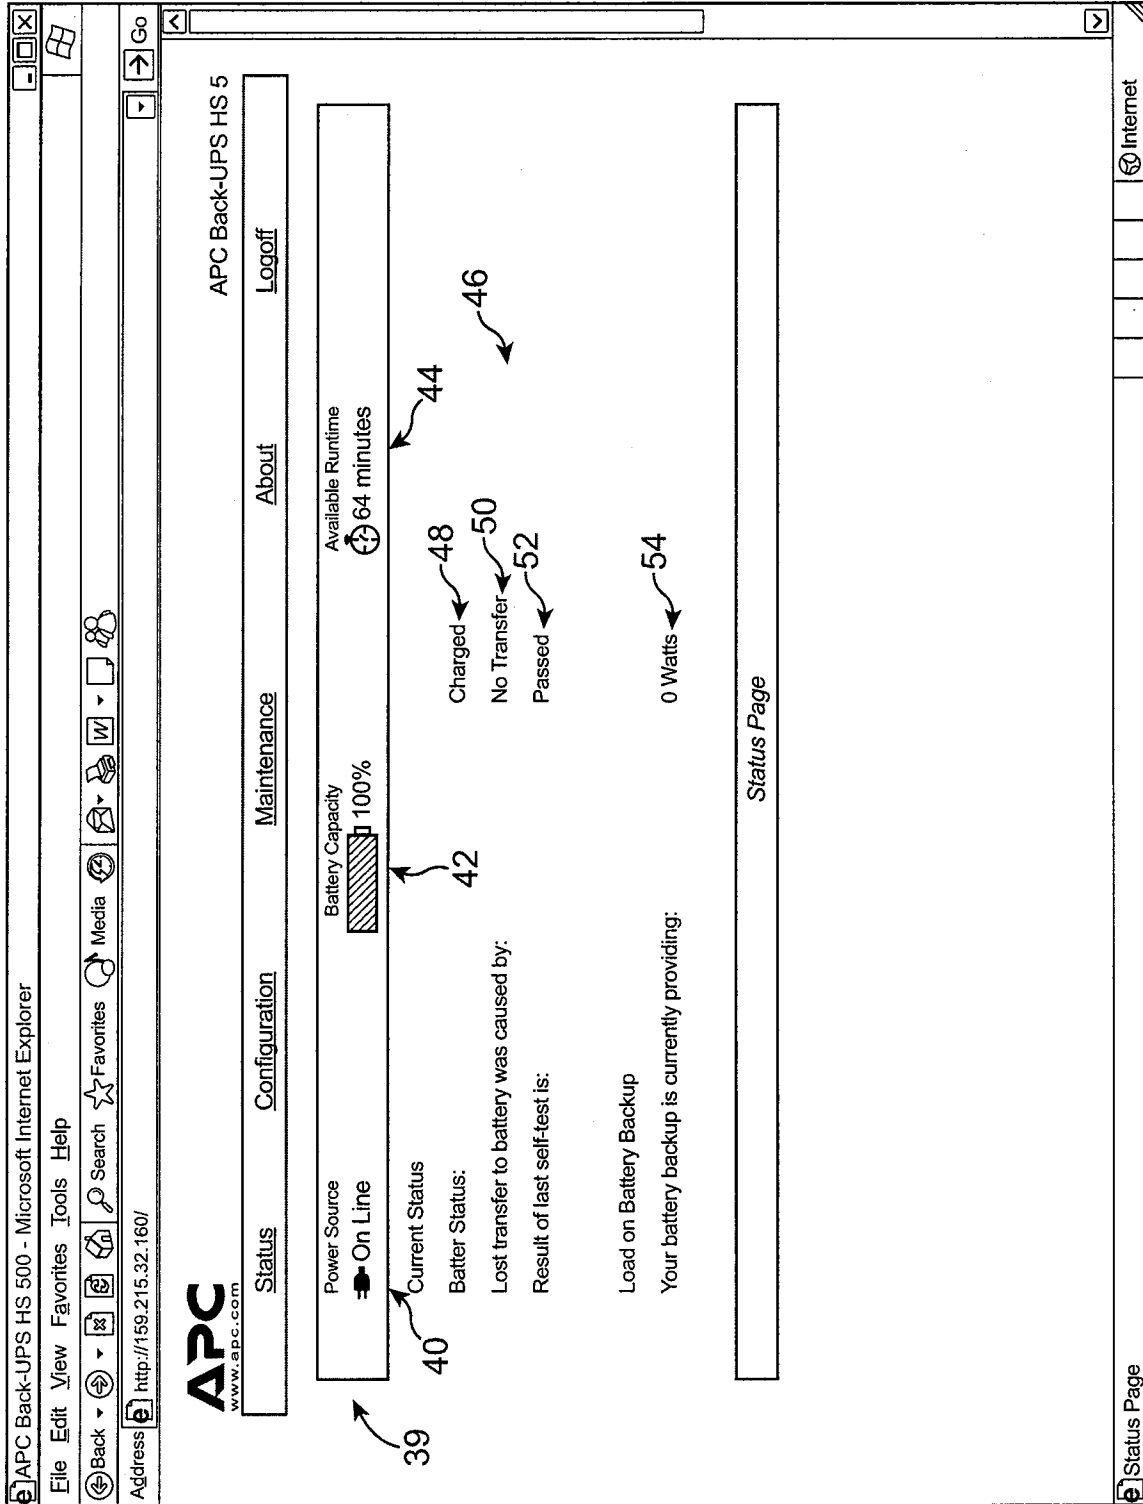


FIG. 8

APC Back-UPS HS 500 - Microsoft Internet Explorer

File Edit View Favorites Tools Help

Back Search Favorites Media W

Address http://159.215.32.160/

APC Back-UPS HS 5

www.apc.com

Status Configuration Maintenance About Logoff

Sensitivity
☐ High ☒ Medium ☐ Low

Audible Alarm
☒ Enable ☐ Disable

Transfer Points
Your battery backup will intervene if AC utility voltage goes above:
Your battery backup will intervene if AC utility voltage goes below:

139 Volts 92 Volts

Outlet Control
80 → ☒ On ☐ Off ☐ Reboot
82 → ☒ On ☐ Off ☐ Reboot
84 → ☒ On ☐ Off ☐ Reboot

Apply Reset

Configuration Page

FIG. 9

APC Back-UPS HS 500 - Microsoft Internet Explorer

File Edit View Favorites Tools Help

Back Forward Stop Search Favorites Media W

Address http://159.215.32.160/

APC
www.apc.com

APC Back-UPS HS 5

Status Configuration Maintenance About Logoff

Battery Self Test

Test Now 90

Test results are displayed on the status page.

Update Battery Replacement Date

Update Now 92

Perform this operation only upon battery replacement.

Change Username and Password

Enter New Username

Enter New Password

Valid entries are 20 or lower characters in length.

Update Now

Restore Factory Defaults

Restore Now 94

Restore battery backup coming back to then factory default value:

Maintenance Page

Maintenance Page

FIG. 10

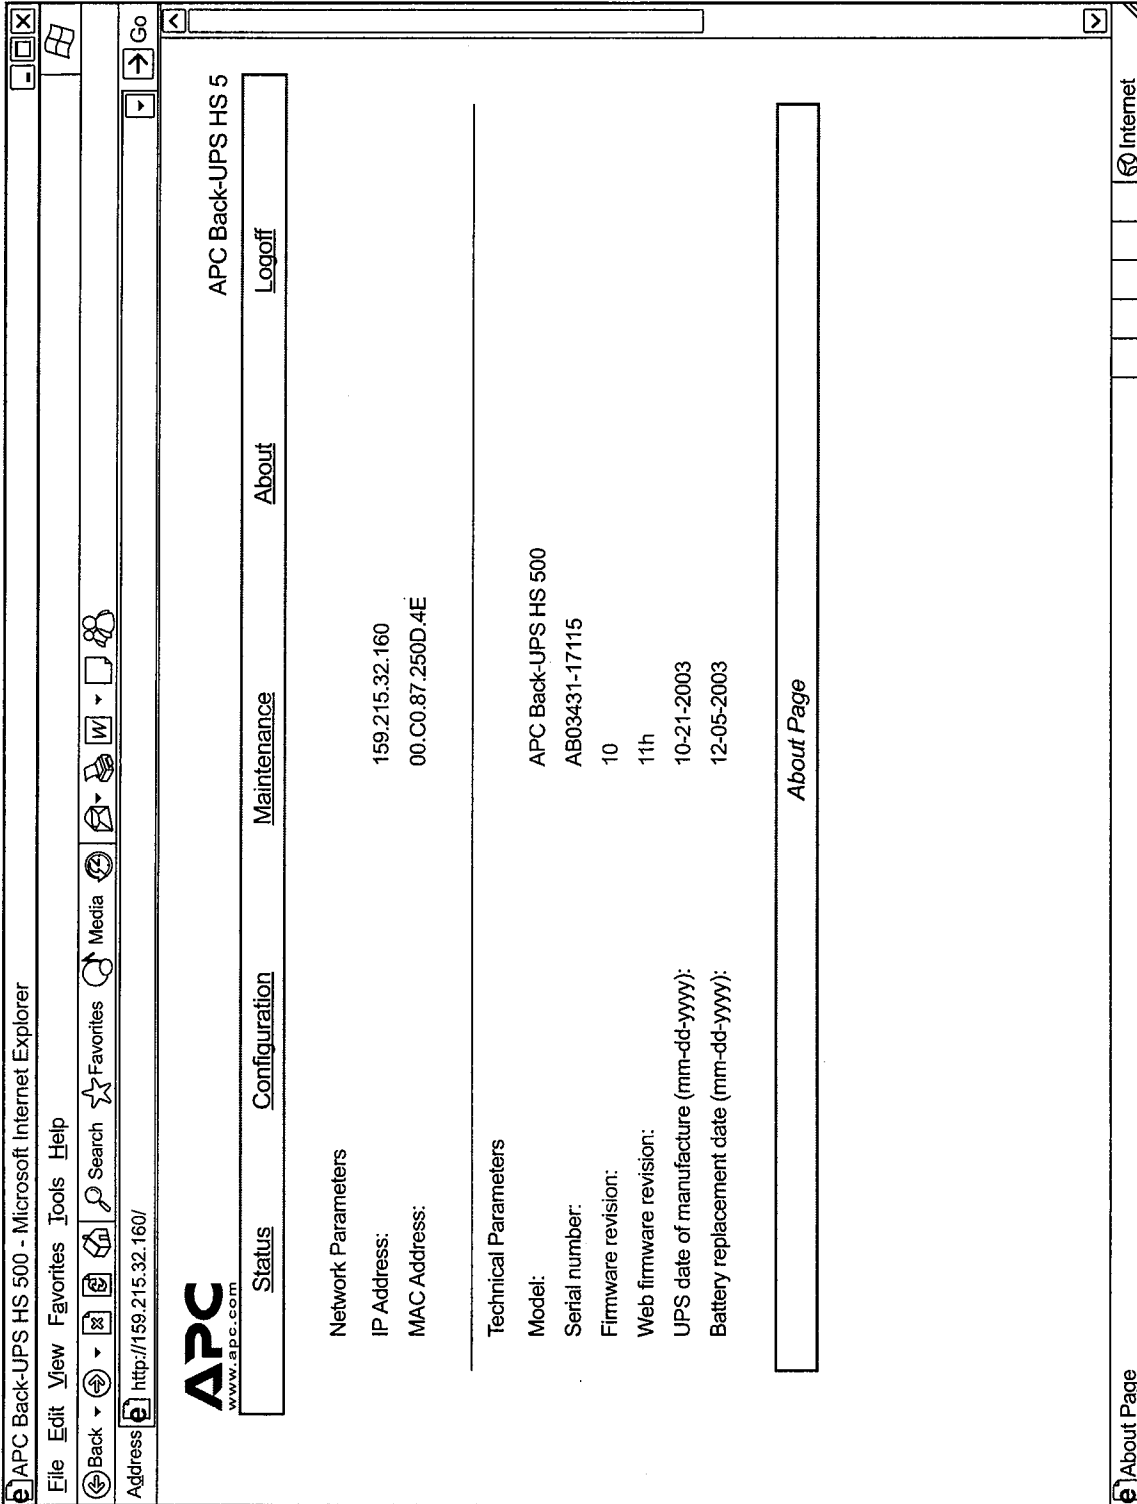


FIG. 11

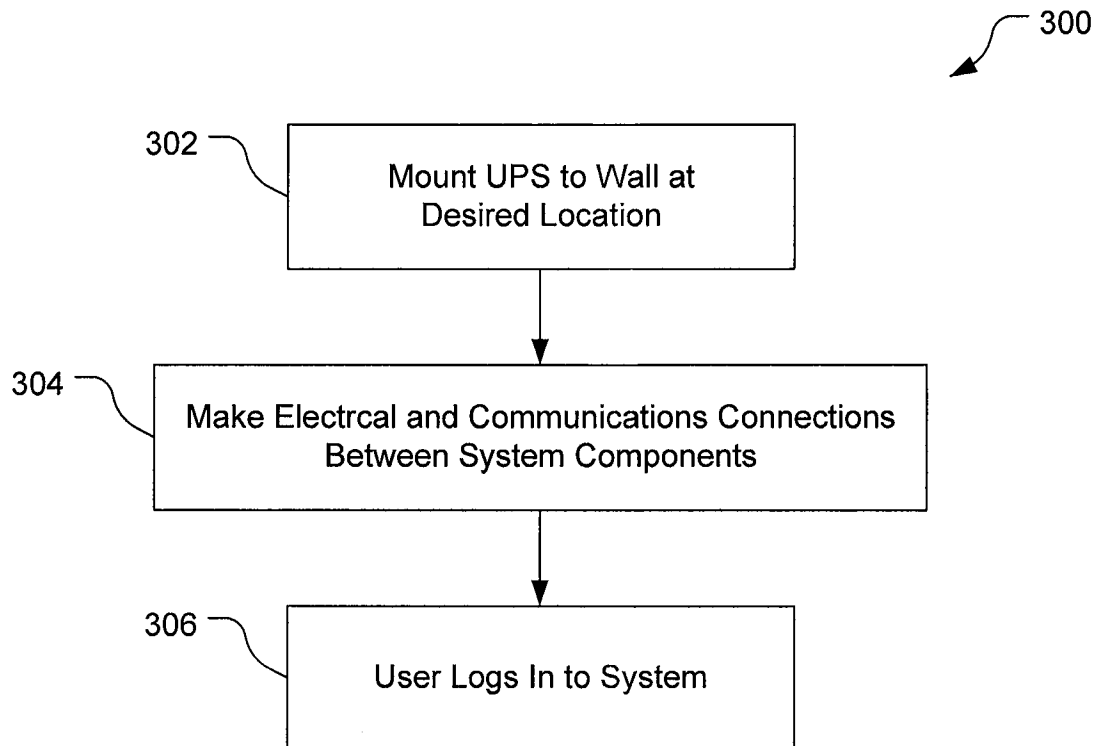


FIG. 12

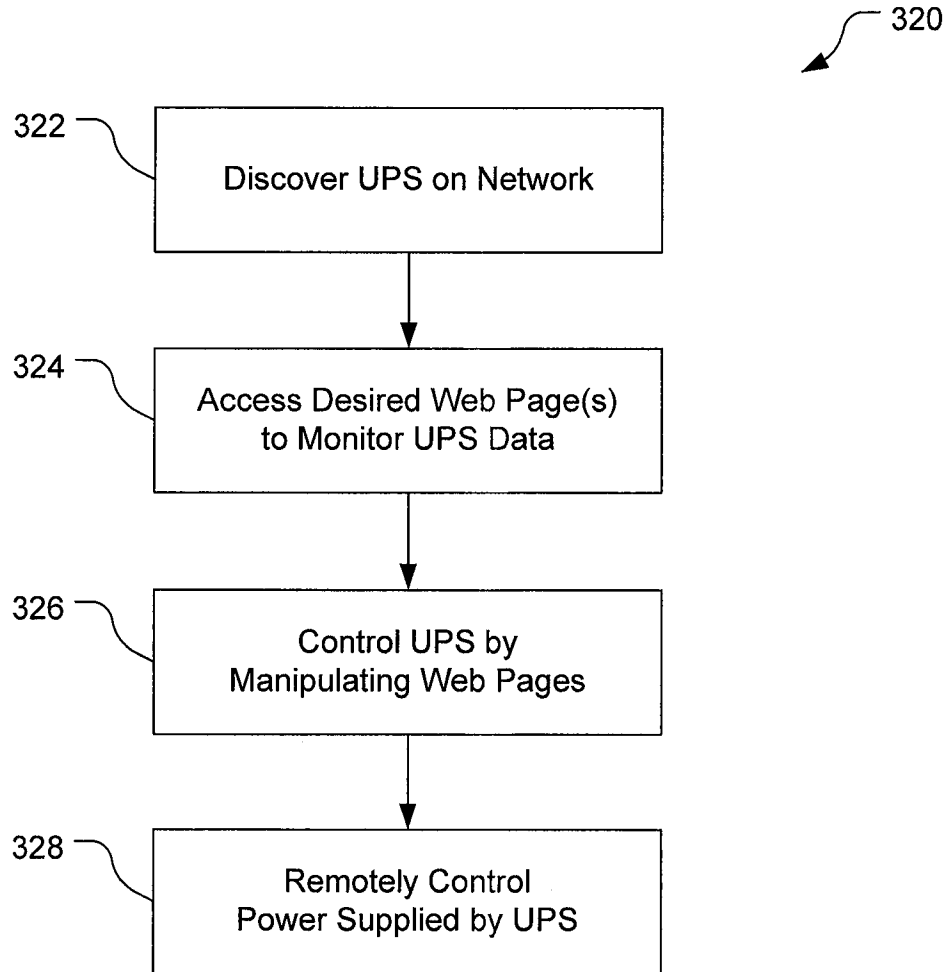


FIG. 13